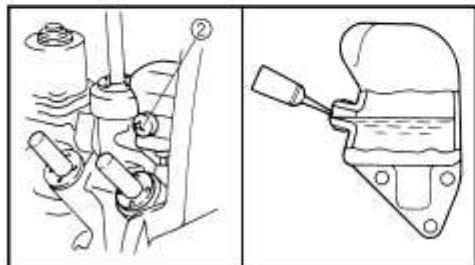


BRKT**POWER TRIM AND TILT UNIT****E**

- (3) Tilt up the outboard fully, then release it, and let it lower by its own weight.
- (4) Tighten the manual valve by turning it clockwise.
- (5) Let the power trim and tilt fluid settle for about 5 minutes.
- (6) Push and hold the power trim and tilt switch in the up position until the outboard is fully tilted up.
- (7) Turn the tilt stop levers to support the outboard. Then, let the power trim and tilt fluid settle for about 5 minutes.
- (8) Remove the reservoir cap ② and check that fluid is up to the brim as shown. Add fluid if the level is below the brim.
- (9) Install the power trim and tilt reservoir cap.
- (10) Repeat the above steps two or three times until the power trim and tilt fluid is at the correct level.